


# SEALUX HydroHALT PlumBud™

**Installation Instructions** Installation videos: [www.hydrohalt.com](http://www.hydrohalt.com)

**Installer:** After installation, please tape this instruction sheet to shower wall for Tiler.

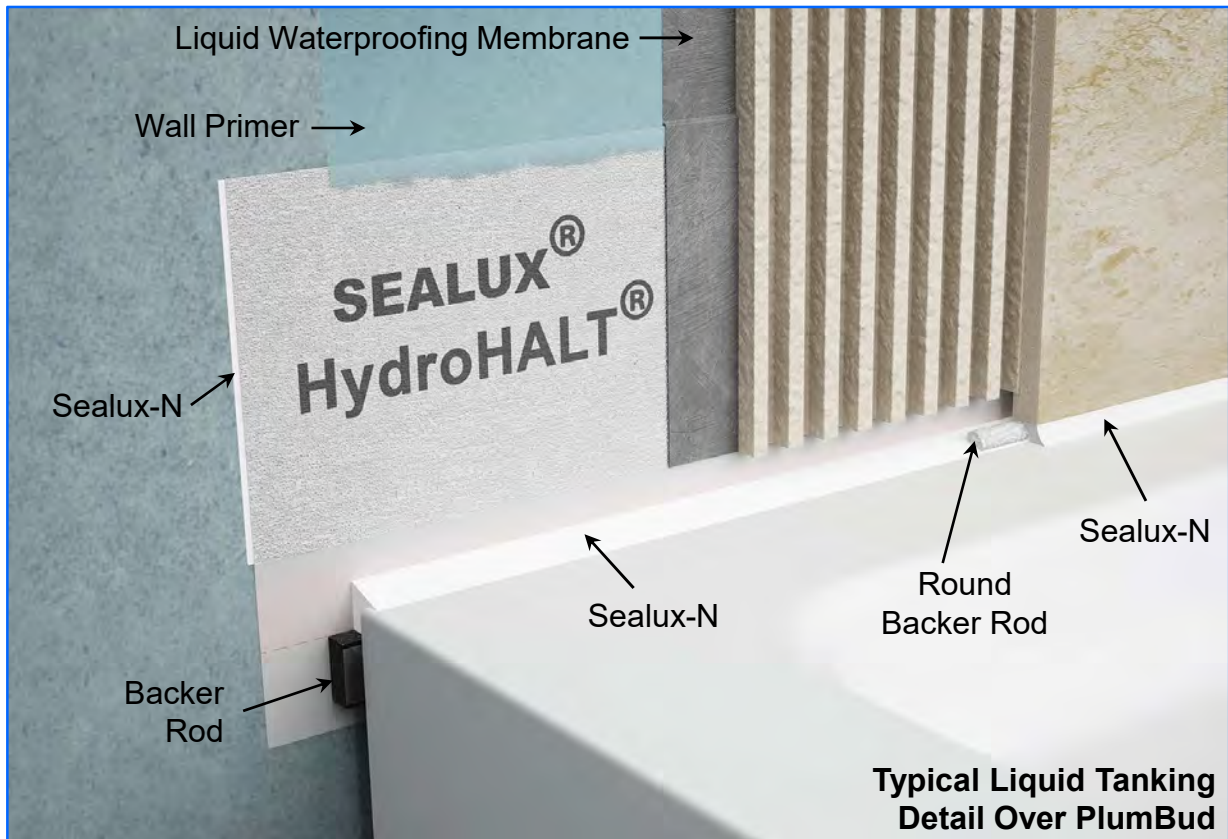

## Tools & Material

1. Sealant Gun
2. Tape and Pencil
3. 50mm Masking Tape
4. Scissors or Sharp Blade
5. Sealant Tissues
6. A Straight Edge (Level)

## Sealux-N

PlumBud is designed for installation with Sealux-N neutral curing silicone or an equivalent quality sealant.


The strip may be bonded to wall with Sealux-N sealant adhesive or an equivalent, a polymer adhesive or C2 tile adhesive.



## Surface Preparation and Care

Remove the tray/bath surface protection film from areas in contact with silicone. Ensure the tray/bath surface is of a material type that adheres to silicone. Use wire wool to abrade surfaces in contact with silicone and clean with alcohol wipes/methylated spirits. Ensure all shower wall surfaces behind the HydroHALT strip are clean, dry and in good condition. Before bonding strip to wall during installation ensure the tray or bath is stable on floor and water test waste system for leaks.






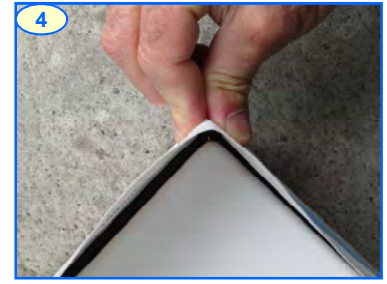

Unroll PlumBud along first sidewall. With side 1 of the strip alignment guide resting on the ledge and overhanging the first sidewall, progressively lift PlumBud up until the backer rod touches the overhanging strip alignment guide and then press the adhesive face of the backer rod onto the sidewall. Continue this process as far as first corner. At corner, rotate the strip alignment guide so that it overhangs two sidewalls. Fold the strip around the corner and bond the backer rod to next sidewall as previously instructed keeping the strip inside face firmly against the strip alignment guide. When the first corner is complete, rotate the strip alignment guide once again and continue as instructed for the remaining sidewalls and corners. After PlumBud is installed on the sidewalls, pinch the backer rod at corner locations.






With the tray/bath in final position, remove adhesive release liner. Firstly use the straight edge of spatula to press-bond the exposed adhesive bed fully into all wall corners and then onto shower walls without creasing strip in the process.

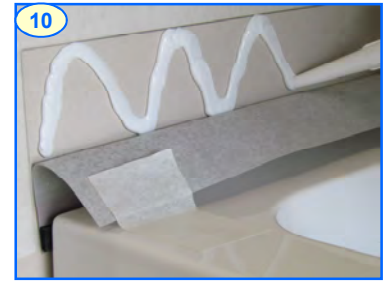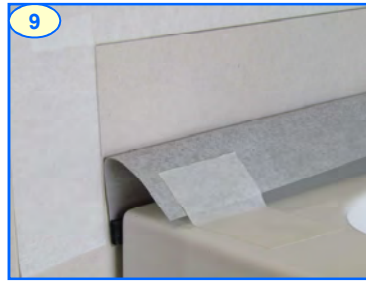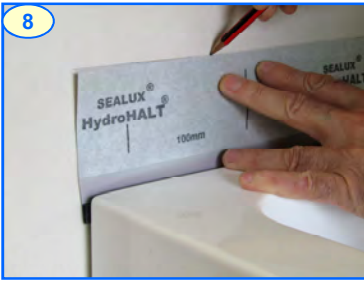

Resting a pencil tip on strip upper edge, draw a wall line over strip or apply masking tape on wall over strip. Tape strip back to ledge. Apply a zigzag 5 mm diameter line of Sealux-N every 100mm on wall between the wall line and strip.



With serrated points of spatula touching wall, spread adhesive. Unfold strip. Using straight edge of spatula press strip into wall corners and then against walls. Remove wall masking tape. Apply masking tape over ledge outside the joint.

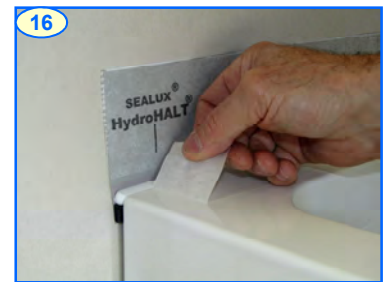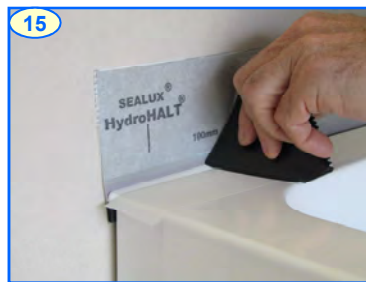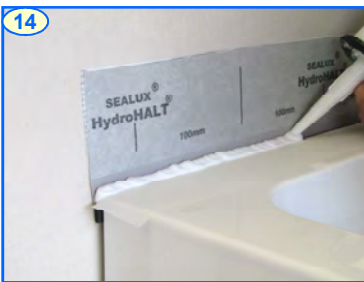

Seal the joint with Sealux-N and rub up silicone to fall towards ledge. Seal one side at a time. Remove masking tape.

**Sealux Ltd.** HydroHALT Plumbud is a patented product and registered trademark. We reserve the right to add, withdraw or modify our product range without notice. Product liability is limited to product replacement. Product details and data sheets are available on [www.sealux.com](http://www.sealux.com) Sealux Limited Tel. UK: 0870 8760 121 Tel. IRL: 01 2989 121 © Doc. Date 10/09/17