

# SEALUX HydroHALT PlumBud™


**Installation Instructions** Installation video: [www.hydrohalt.com](http://www.hydrohalt.com)

**Installer:** After installation, please tape this instruction sheet to shower wall for Tiler.

PlumBud is designed for installation with Sealux-N neutral curing sanitary grade silicone.

Bond strip to wall with a suitable tile adhesive or an approved liquid applied shower wall waterproofing material or a non-solvent polymer adhesive sealant.

If bonding strip to wall with Sealux-N, apply masking tape outside strip edges.

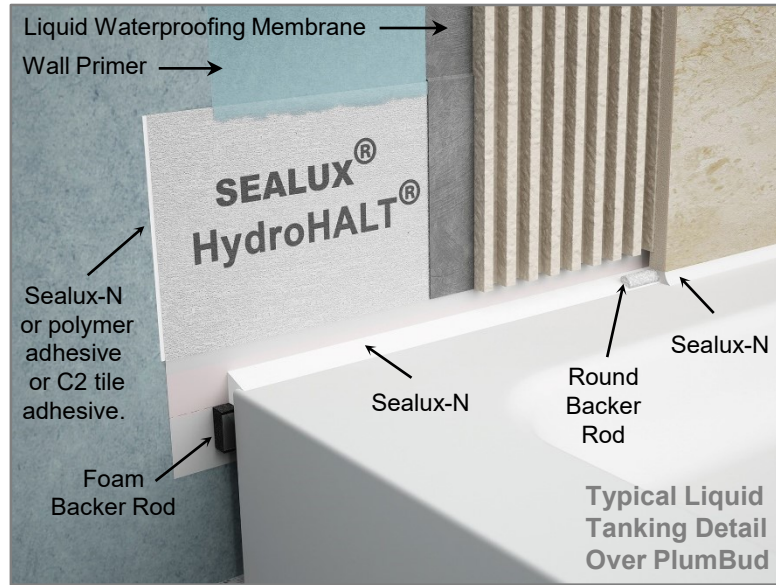

## Tools & Material Required

Sealant Tissues



50mm Masking Tape




Scissors



Tape & Pencil

Sealant Gun

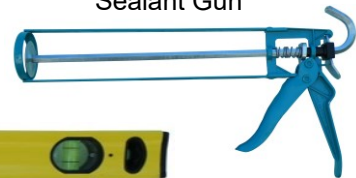


**Preparation:** Remove tray/bath surface protection film from areas in contact with silicone. Ensure tray/bath surface is of a material type that adheres to silicone. Use wire wool to abrade surfaces in contact with silicone and clean with alcohol wipes/methylated spirits. Ensure all shower wall surfaces behind the strip are clean, dry and in good condition. Before bonding strip to wall during installation ensure the tray or bath rests stable on floor and waste system tested for leaks.



**Sealux Ltd.** HydroHALT Plumbud is a patented product and registered trademark. We reserve the right to add, withdraw or modify our product range without notice. Product liability is limited to product replacement. Product details and data sheets are available on [www.sealux.com](http://www.sealux.com) Sealux Limited Tel. UK: 0870 8760 121 Tel. IRL: 01 2989 121 © Doc. Date March 2020





Clean sidewalls with alcohol wipes. With guide (G) on ledge overhanging sidewall, progressively lift strip up until foam touches underside of overhanging guide, then press exposed adhesive face onto sidewall. At corners rotate guide to overhang 2 sidewalls and fold strip 90° around corner bonding foam to sidewalls in the process. Rotate & reposition guide, continue as instructed for remaining sidewalls & corners. Pinch backer rod at corners.

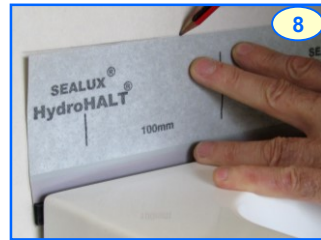

With tray/bath in final position, remove blue release liner. Use spatula straight edge to firstly press-bond exposed adhesive bed fully into each wall corner and then onto walls without creasing. Resting a pencil tip on strip upper edge, draw a wall line over strip or apply masking tape on wall outside strip edges. Tape strip back to ledge.

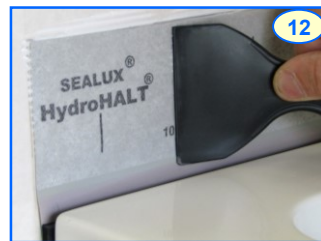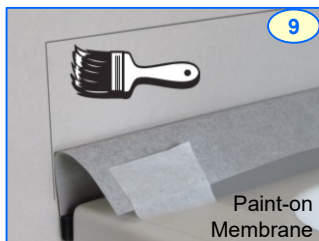

Bond strip to wall using approved: (9) cementitious liquid wall waterproofing material or (10-12) non-solvent polymer adhesive or cementitious tile adhesive. Sealux-N can be used as the strip adhesive on most shower wall substrates, but first apply masking tape outside strip upper and end boundaries to prevent smearing on wall.

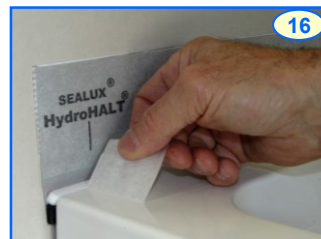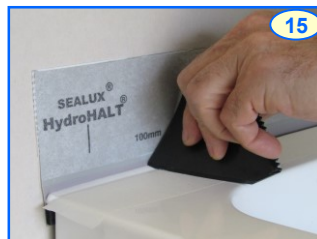

Apply masking tape over flat ledge surface just outside line of joint. Apply Sealux-N into joint leaving it slightly proud. Rub up Sealux-N to fall towards ledge. Seal one side at a time. Remove masking tape off ledge.